Save Time and Money! With Wing Jack Pads

The Wing Jack Pads are an auxiliary set of jack pads that attach to the upper wing strut bolt and to an adaptor for the tail stand to create more ease for the owner and mechanic.



Phone: (580) 242-5907 Email: parts@asic.aero Web: WWW.ASIC.AERO

• Less maintenance time for various jobs; such as changing tires, float installation, landing gear corrosion inspection and weight and balance.

- Less man power used
- No need for a crane or hoist for float installation

